


# M3 Mobile SL20

# Accessory Guide

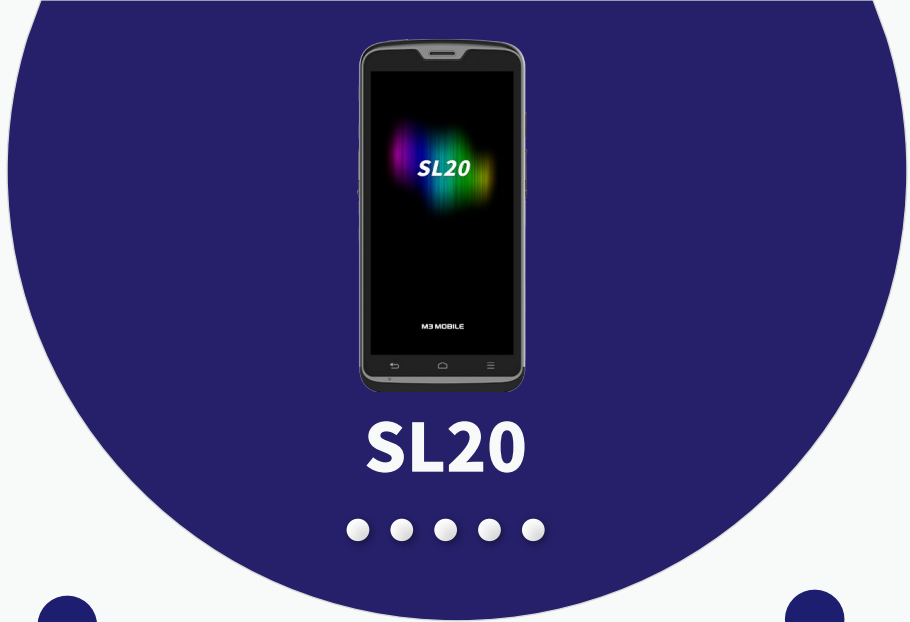

**1-Slot Cradle**

Charging only

**2-Slot Cradle**

Charging & Ethernet

Charging & USB



**MISCELLANEOUS**

Battery (2 types)

USB Cable

Boot / Hand strap

Screen protector



**8-Slot Cradle (2 types)**

Charging & Ethernet

Charging Only



**Trigger Handle**



**Wearable**

Ring trigger

Ring scanner charging cradle

Holster / Armband

\* The above list may be added or changed.

## 1-Slot & 2-Slot Cradle



### **SL20-1CRD-C00**

SL20 1-Slot charging only cradle for 1xSL20.

### **SL20-2CRD-CC0**

SL20 2-Slot charging & USB(Client) cradle for 1xSL20 & 1xSL20 spare battery.

### **SL20-2CRD-EC0**

SL20 2-Slot charging & Ethernet cradle for 1xSL20 & 1xSL20 spare battery.

1 & 2-Slot Cradles requires power supply: SL20-PWSP-2EU(-LL), SL20-PWSP-2KR, UNIV-PWSP-2US, UNIV-PWSP-2UK, UNIV-PWSP-2CN, UNIV-PWSP-2AU ; included DC Line and AC Cord

## 8-Slot Cradle



### **SL20-8CRD-C00**

SL20 8 slot charge only cradle for 4xdevice & 4xspare battery.

### **SL20-8CRD-E00**

SL20 8 slot charging & Ethernet cradle for 4xdevice & 4xspare battery.

8-Slot Cradles requires power supply: 100~240VAC, 12VDC, 7A.  
UNIV-PWSP-8KR, UNIV-PWSP-8EU, UNIV-PWSP-8US, UNIV-PWSP-8UK, UNIV-PWSP-8CN,  
UNIV-PWSP-8AU ; included DC Line and AC Cord

## Trigger Handle



### **SL20-TRIG-S00**

Trigger Handle for SL20.

Easily attaches to SL20 top housing  
Charging is possible immediately without removing the trigger when using the cradle.  
Use SL20 by contacting the rear I/O connector pin.

---

## Rubber Boot



### **SL20-BOOT-01**

Rubber boot for SL20.

Easily attaches to SL20 top housing  
Charging is possible immediately without removing the Boot when using the cradle.  
(When charging SL20 with Rubber boot, remove the charging pocket inside the cradle.)

## Ring Scanner & Cradle



### UNIV-WERS-U20

Ring scanner SE4710, Bluetooth type \*Using the M3 Ring Scanner Application

### UNIV-WERS-U10

Ring scanner SE2707, Bluetooth type \*Using the M3 Ring Scanner Application

### UNIV-WERC-U00

Ring scanner charging cradle (5V USB adapter sold separately, USB cable is included)

### UNIV-WERC-C00

USB Cable for Ring scanner Charing cradle, 1.5M

## Arm Band & Holster



### UNIV-CASE-FSH

SL10, SL10K, SL20, SM10, SM15, SM20 Fabric Holster with Strap, belt

### UNIV-CASE-FAB

SL10, SL10K, SL20, SM10, SM15, SM20 Arm Band

## Battery



### SL20-BTDO-SHF

NFC Battery Door for SL20 when using Standard Battery

### SL20-BATT-S30

SL20 Charging Standard Capacity Spare Battery 3,000mAh

### SL20-BTDO-EHF

NFC Battery Door for SL20 when using Extended Battery

### SL20-BATT-E50

SL20 Charging Extended Capacity Spare Battery 5,000mAh

## MISCELLANEOUS



### SL20-STRP-S50

Hand strap for SL20 (50 pcs)

### SL20-STRP-S10

Hand strap for SL20 (10 pcs)

### SL20-SCPR

Bullet proof Screen Protector for SL20

### SL20-PWSP-CEU

Power supply: 100~240VAC, 5V, 2A USB adaptor, EU plug, USB cable, 1.2M, C to A plug